

Microcontrollers

Documentatie over diverse microcontrollers die gebruikt kunnen worden in de domotica

- [Espressif](#)
 - [ESP32](#)
 - [ESP8266 \(ESP01, ESP01-S\)](#)
- [Tools](#)
 - [FT232RL 3.3V 5V FTDI USB To TTL Serial Adapter Module](#)

Espressif

Documentatie Espressif microcontrollers

ESP32

De ESP32 is een budgetserie van laag-vermogen microcontrollers met geïntegreerde Wi-Fi en dual-mode Bluetooth. De ESP32-serie maakt gebruik van een Tensilica Xtensa LX6- microprocessor in zowel dual-core als single-core uitvoering. De ESP32 is gemaakt en ontwikkeld door Espressif Systems, een in Shanghai gevestigd Chinees bedrijf, en wordt vervaardigd door TSMC met behulp van hun 40nm-proces. Het is een opvolger van de ESP8266 microcontroller. Deze microcontroller is erg populair bij hobbyisten voor het ontwikkelen van Internet of things applicaties.

De ESP32 is verkrijgbaar in diverse uitvoeringen. Zelf heb ik een ESP32 Wroom 32D (38 pins) aangeschaft om mee te experimenteren.

[ESP32-ESP-WROOM-32.jpg](#)

Pin bezetting ESP32 Wroom 32 (38 pins)

[ESP32-Pinout.png](#)

[ESP32-Pinout-2.jpg](#)

ESP32-WROOM-32 (ESP-WROOM-32) Pin Configuration

| Pin Category | Pin Name | Details |
|--------------|---------------------------------|---|
| Power | Micro-USB, 3.3V, 5V, GND | Micro-USB: ESP32 can be powered through USB port 5V: Regulated 5V can be supplied to this pin which is we be again regulated to 3.3V by on board regulator, to power the board. 3.3V: Regulated 3.3V can be supplied to this pin to power the board. GND: Ground pins. |
| Enable | En | The pin and the button resets the microcontroller. |

| | | |
|-----------------------|--|--|
| Analog Pins | ADC1_0 to ADC1_5 and ADC2_0 to ADC2_9 | Used to measure analog voltage in the range of 0-3.3V.12-bit 18 Channel ADC |
| DAC pins | DAC1 and DAC2 | Used for Digital to analog Conversion |
| Input/output Pins | GPIO0 to GPIO39 | Totally 39 GPIO pins, can be used as input or output pins. 0V (low) and 3.3V (high). But pins 34 to 39 can be used as input only |
| Capacitive Touch pins | T0 to T9 | These 10 pins can be used a touch pins normally used for capacitive pads |
| RTC GPIO pins | RTCIO0 to RTCIO17 | These 18 GPIO pins can be used to wake up the ESP32 from deep sleep mode. |
| Serial | Rx, Tx | Used to receive and transmit TTL serial data. |
| External Interrupts | All GPIO | Any GPIO can be use to trigger an interrupt. |

| | | |
|------|--|---|
| PWM | All GPIO | 16 independent channel is available for PWM any GPIO can be made to work as PWM though software |
| VSPI | GPIO23 (MOSI), GPIO19(MISO), GPIO18(CLK) and GPIO5 (CS) | Used for SPI-1 communication. |
| HSPI | GPIO13 (MOSI), GPIO12(MISO), GPIO14(CLK) and GPIO15 (CS) | Used for SPI-2 communication. |
| IIC | GPIO21(SDA), GPIO22(SCL) | Used for I2C communication. |
| AREF | AREF | To provide reference voltage for input voltage. |

ESP32-WROOM-32 (ESP-WROOM-32) Technical features

| | |
|-----------------------------|-------------------------------------|
| Microprocessor | Tensilica Xtensa LX6 |
| Maximum Operating Frequency | 240MHz |
| Operating Voltage | 3.3V |
| Analog Input Pins | 12-bit, 18 Channel |
| DAC Pins | 8-bit, 2 Channel |
| Digital I/O Pins | 39 (of which 34 is normal GPIO pin) |

| | |
|------------------------|---|
| DC Current on I/O Pins | 40 mA |
| DC Current on 3.3V Pin | 50 mA |
| SRAM | 520 KB |
| Communication | SPI(4), I2C(2), I2S(2), CAN, UART(3) |
| Wi-Fi | 802.11 b/g/n |
| Bluetooth | V4.2 - Supports BLE and Classic Bluetooth |

Shop

[AliExpress](#)

ESP8266 (ESP01, ESP01-S)

De ESP8266 is een goedkope microprocessor met Wi-Fi mogelijkheid en een volledige TCP/IP stack. De ESP8266 is ontwikkeld en wordt geproduceerd door de Chinese fabrikant Espressif Systems uit Shanghai.

[esp01-esp01s.jpg](#)

[ESP-01-ESP8266-pinout-gpio-pin.png](#)

ESP8266 Pin Configuration

| Pin Number | Pin Name | Alternate Name | Normally used for | Alternate purpose |
|------------|-----------------|----------------|--|--|
| 1 | Ground | - | Connected to the ground of the circuit | - |
| 2 | TX | GPIO - 1 | Connected to Rx pin of programmer/uC to upload program | Can act as a General purpose Input/output pin when not used as TX |
| 3 | GPIO-2 | - | General purpose Input/output pin | - |
| 4 | CH_EN | - | Chip Enable - Active high | - |
| 5 | GPIO - 0 | Flash | General purpose Input/output pin | Takes module into serial programming when held low during start up |
| 6 | Reset | - | Resets the module | - |
| 7 | RX | GPIO - 3 | General purpose Input/output pin | Can act as a General purpose Input/output pin when not used as RX |

| | | | | |
|---|------------|---|-----------------------|--|
| 8 | Vcc | - | Connect to +3.3V only | |
|---|------------|---|-----------------------|--|

Pin Configuration

Shop

[AliExpress](#)

Tools

FT232RL 3.3V 5V FTDI USB To TTL Serial Adapter Module

The USB to TTL serial adapter is based on the high quality and very popular FTDI FT232RL chipset and is an excellent way to connect TTL serial devices to a PC through a USB port.

Works perfectly with the Arduino Pro mini boards and ESP8266 boards

Ideas for many uses, including:

- Programming microprocessors such as ARM, AVR, etc
- Working with computing hardware such as routers and switches
- Serial communication with many devices such as GPS devices
- Serial terminals on devices like the Raspberry Pi

This adapter supports both 5V AND 3.3V operation! Simply set the jumper as required to choose between 5V and 3.3V as labelled on the board.

The adapter comes with a right-angle connector fitted allowing you to use it straight away. If you need to access any of the other inputs or outputs of the FT232RL, all the useful signals are provided as through-hole solder pads – ideal for use with straight headers into a breadboard, for example.

The main connector has 6 pins:

[ft232rl-aansluiting.png](#)

- DTR: Data Terminal Ready – an output used for flow control
- RX: Serial data Receive pin
- TX: Serial data Transmit pin
- VCC: Positive voltage output – this is controlled by the jumper. If the jumper is set to 5V, this will provide a 5V output. If the jumper is set to 3.3V, this will provide a 3.3V output.
- CTS: Clear To Send – an input used for flow control
- GND: Ground or 0V

For most uses, you can simply connect the following pins:

- RX on this board to the TX pin on your device
- TX on this board to the RX pin on your device
- GND on this board to GND on your device

FEATURES

- Support 3.3V, 5V
- Chipset FT232RL
- USB power has over current protection, using 500MA self-restore fuse
- RXD/TXD transceiver communication indicator
- Pin definition: DTR,RXD,TX,VCC,CTS,GND
- Pitch:2.54mm
- Module size: 3.60cm x 1.85cm (L x W)

Shop

[AliExpress](#)